

| | | CPU | PR-6DC-DA-R | PR-6AC-R | PR-12AC-R-E | PR-12DC-DA-R-E | PR-12AC-R | PR-12DC-DA-R | PR-12DC-DA-TN | PR-18AC-R | PR-18DC-DA-R | PR-18DC-DA-RT | PR-24AC-R | PR-24DC-DA-R | PR-24DC-DAI-RTA | ELC-12AC-R-N | ELC-12DC-DA-R-N | EXM-8AC-R | EXM-12DC-DA-R | EXM-12DC-DAI-R | EXM-12DC-DA-R-N | EXM-12DC-DA-R-VN | EXM-8DC-PT100-R | EXM-12DC-DA-RT-GWIFI | EXM-12DC-DA-RT-WIFI | |
|-------------------|---------------------|-------------------|-------------|----------|-------------|----------------|-----------|--------------|---------------|-----------|--------------|---------------|-----------|--------------|-----------------|--------------|-----------------|-----------|---------------|----------------|-----------------|------------------|-----------------|----------------------|---------------------|---|
| Features | Supply Voltage | AC | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | |
| | Inputs | DC | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | |
| | | Digital | 4 | 8 | 8 | 8 | 4 | 4 | 12 | 6 | 6 | 14 | 8 | 8 | 8 | 4 | 4 | 6 | 4 | 4 | 4 | 4 | 4 | 2 | 4 | 4 |
| | | Digital/Analogue | 4 | | 4 | 4 | 4 | 4 | | 6 | 6 | | 6 | 4 | 8 | 4 | 4 | | 4 | 2 | 4 | 4 | 4 | 4 | 4 | 4 |
| | Outputs | Analogue(0..20mA) | | | | | | | | | | | | 2 | | | | | | 2 | | | | | | |
| | | PT100 | | | | | | | | | | | | | | | | | | | | | | 2 | | |
| | | Relay | 2 | 2 | 4 | 4 | 4 | 4 | 4 | 6 | 6 | 4 | 10 | 10 | 6 | 4 | 4 | 4 | 2 | 4 | 4 | 4 | 4 | 4 | 4 | 2 |
| | High Speed Counting | Transistor | | | | | | 4 | | | 2 | | | 2 | | | | | | | | | | | 2 | 2 |
| | | Analogue | | | | | | | | | | | | 2 | | | | | | | | | | | | |
| | | 14 kHz | | | | | | | 4 | 4 | 4 | 4 | | | | | | 2 | | 2 | 2 | 2 | 2 | | 2 | 2 |
| | PWM | | | | | | | 2 | | | 2 | | | | | | | | | | | | | | | |
| | RTC | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Modbus | RTU | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • |
| | | TCP | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • |
| | Expandable | | | | | | | | | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • |
| Analogue output | | | | | | | | | | | | | | 2 | | | | | | | | | | | | |
| Built-in RS485 | | | | | | | | | | | | | • | • | • | | | | | | | • | • | • | • | |
| Built-in Ethernet | | | | | | | | | | | | | | | | • | • | | | | | • | • | • | • | |
| GSM&GPRS | | | | | | | | | | | | | | | | | | • | • | • | • | • | • | • | • | |
| Voice | | | | | | | | | | | | | | | | | | | | | | • | | | | |
| WiFi | | | | | | | | | | | | | | | | | | | | | | | | • | • | |
| Expansion Units | Digital | PR-E-16AC-R | | | | | | | | • | • | • | • | • | • | | | | | | | | | | | |
| | | PR-E-16DC-DA-R | | | | | | | | • | • | • | • | • | • | | | | | | | | | | | |
| | | PR-E-16DC-DA-TN | | | | | | | | • | • | • | • | • | • | | | | | | | | | | | |
| Analogue | PR-E-AI-I | | | | | | | | | • | • | • | • | • | | | | | | | | | | | | |
| | PR-E-PT100 | | | | | | | | | • | • | • | • | • | | | | | | | | | | | | |
| | PR-E-AQ-VI | | | | | | | | | • | • | • | • | • | | | | | | | | | | | | |
| Expansion Units | Digital | EXM-E-8AC-R | | | | | | | | | | | | | | • | • | • | • | • | • | • | • | • | • | |
| | | EXM-E-8DC-DA-R | | | | | | | | | | | | | | | • | • | • | • | • | • | • | • | • | |
| | Analogue | EXM-E-AI-I | | | | | | | | | | | | | | | • | • | • | • | • | • | • | • | • | |
| | | EXM-E-PT100 | | | | | | | | | | | | | | | • | • | • | • | • | • | • | • | • | |
| | | EXM-E-AQ-V | | | | | | | | | | | | | | | • | • | • | • | • | • | • | • | • | |
| EXM-E-AQ-I | | | | | | | | | | | | | | | • | • | • | • | • | • | • | • | • | | | |
| Accessories | ELC-MD204L | | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | |
| | PRO-RS485 | | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | |
| | ELC-COPIER | | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | |
| | PR-RS485 | | | | | | | | | • | • | • | • | • | • | | | | | | | | | | | |
| | ELC-RS232 | | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | |
| | ELC-USB | | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | |
| | ELC-43TS | | | | | | | | | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | |
| | ELC-BATTERY | | | | | | | | | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | |
| EXM-E-RS485 | | | | | | | | | | | | | | | • | • | • | • | • | • | • | • | • | | | |